

# The **BASH!**

2133 Mountain Industrial Blvd  
Tucker, GA 30084  
[BashPartyRentals@gmail.com](mailto:BashPartyRentals@gmail.com)

Phone – (404) 437-6136

[www.BashPartyRentals.com](http://www.BashPartyRentals.com)

## **Confetti Cannon – Wireless: REMOTE**

### **CAUTION: THIS IS NOT A TOY. THIS CANNON SHOULD NEVER BE OPERATED BY A CHILD!**

1. Cannon is extremely powerful. Shooting the cannon in someone's face or at close range can cause serious injury including but not limited to burst eardrum, eye injury, or loss of hearing. **Do not** point at anyone! **Do not** crouch down near barrel to adjust cannon when power is on! Always shoot upwards into the air, away from people. Avoid shooting at lights, ceiling fans or any breakable overhead objects including sprinkler heads.
2. You will need a minimum of a 30' ceiling clearance. You can adjust the angle at the base.

### **Preparation Info:**

1. Your unit has a battery pack which has been pre-charged. The battery is in the off position when you receive it. The power switch is also in the off position. Never use your own power cord to plug the machines into a wall outlet. This will ruin the battery and you will be charged a \$350 replacement fee.
2. Your confetti E- Cartridges come separately and you will need to load them into the machine in preparation for your shoot.

### **FIRING: FOLLOW THESE STEPS EXACTLY TO ENSURE A SAFE & EFFECTIVE SHOOT!**

1. Place the confetti cannon unit in position from where you would like to shoot.
2. Place both confetti cartridges (arrow on tube indicates which side is up) into the unit. Tighten the knobs until secure only. Do not over tighten.
3. Adjust the angle of the confetti cartridges, by loosening the knobs, into the position you want them. Tighten until secure.
4. Your wireless remote trigger (white with red button) comes separately. Place in a secure location where it will not accidentally be pressed.
5. Make sure the unit is OFF! Pull the plug in cables, which are attached to each confetti e-cartridge, from the side of the tube until it is extended and plug it into the unit where it is marked "output." With your finger, poke a hole in the cellophane that secures the confetti in the cartridge. Or, for special order cannons, remove the plastic cap taped onto the top of the barrel.
6. *Keeping your head and face away from the confetti cartridges*, turn the battery (white box) power on. "On" is indicated with a vertical line symbol. "Off" is indicated with a circular symbol.
7. Turn the power switch on for the main black unit.
8. Extend the antennae on the remote. Turn your remote on by switching the black button on the side to the "On" (up) position.

**YOUR CANNONS ARE NOW LIVE AND THEY WILL DEPLOY WHEN YOU PUSH THE RED BUTTON ON YOUR HAND HELD WIRELESS REMOTE!!!**

**Video Instructions Via YouTube:** 39mNRQ5uLxs