

The **BASH!**

2133 Mountain Industrial Blvd
Tucker, GA 30084
BashPartyRentals@gmail.com

Phone – (404) 437-6136

www.BashPartyRentals.com

Popcorn Instructions

Using the Machine:

1. Plug the machine into a standard grounded outlet. You can use any three-pronged extension cord as needed.
2. Turn on the “Power” switch (located at the bottom of the unit) and the “Kettle” switch (located at the top of the unit). The “Ready” green light will come on when the machine has reached the proper cooking temperature.
3. Open the plexiglass doors. Pull firmly down on the black lever of the kettle. This will lift the kettle lid.
4. Cut open the oil side of the popcorn pack. Slowly pour the oil into the kettle. Only pour in one popcorn pack oil serving at a time. **Be careful not to touch the kettle as it gets extremely hot to the touch.**
5. Turn on the “Warmer” and “Stirrer” switches. Wait for the ready light to light up green again.
6. Cut open the kernel side of the popcorn pack and pour into the kettle.
7. Lower the lid of the kettle.
8. Allow corn to pop until you hear the popping rate slow down. When the popping is about 3-5 seconds apart, the batch is done.
9. Lower the kettle by grasping the handle on the kettle and pulling firmly down. **Be careful not to touch the kettle as it gets extremely hot to the touch.**
10. Always turn the kettle and stirrer switches off when machine is not popping.

When You Are Finished with Your Rental:

1. Turn all switches to “Off,” then unplug the unit and allow it to cool.
2. Remove all popcorn from machine.
3. Wipe down the cooled kettle with a dry paper towel. Please do not use any water on the kettle.
4. Empty the silver slide-out tray of kernels.

With Your Rental You Received:

- 1 – Red Popcorn Cart
- 1 – Removable Red Popcorn Cart Tray
- 1 – Glass Popcorn Machine
- 1 – Popcorn Scoop